

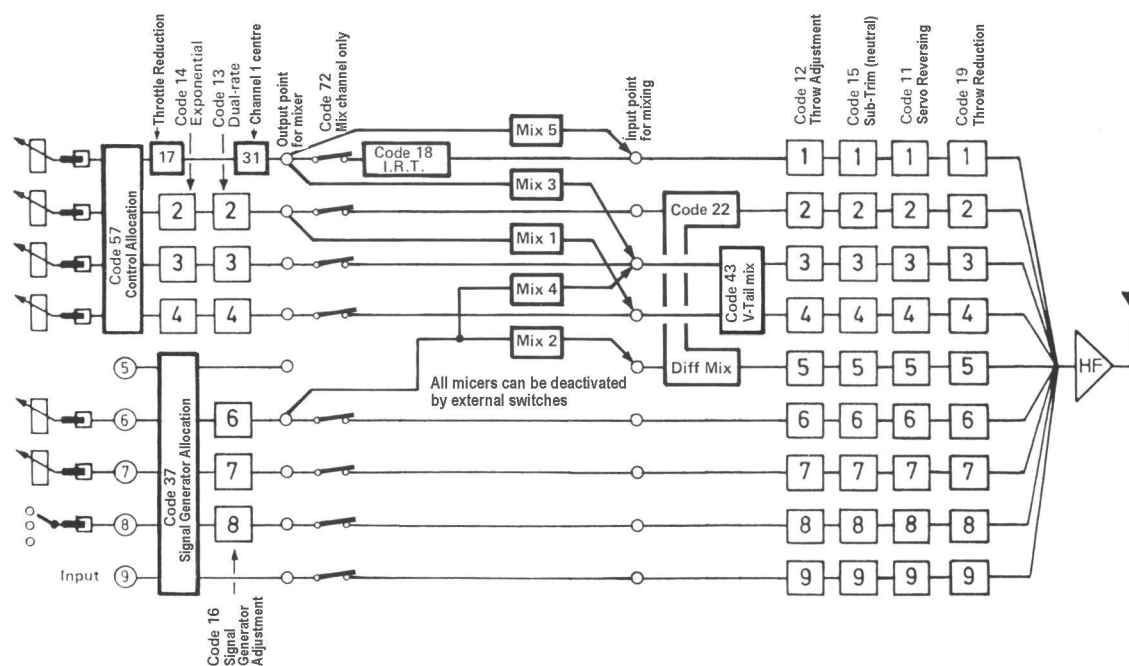
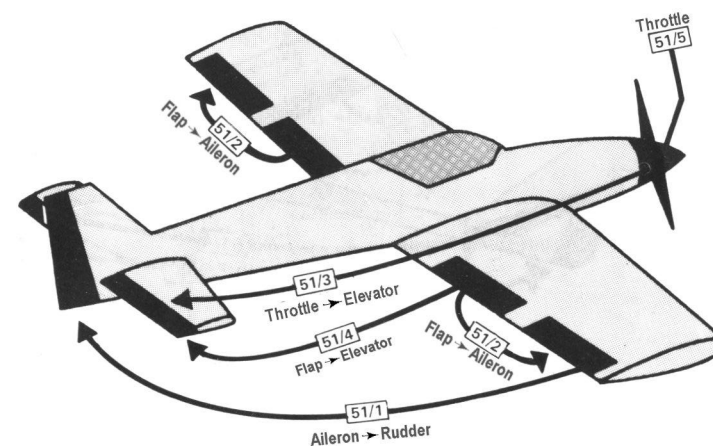


Block Diagram – UNIFLY/DIFF

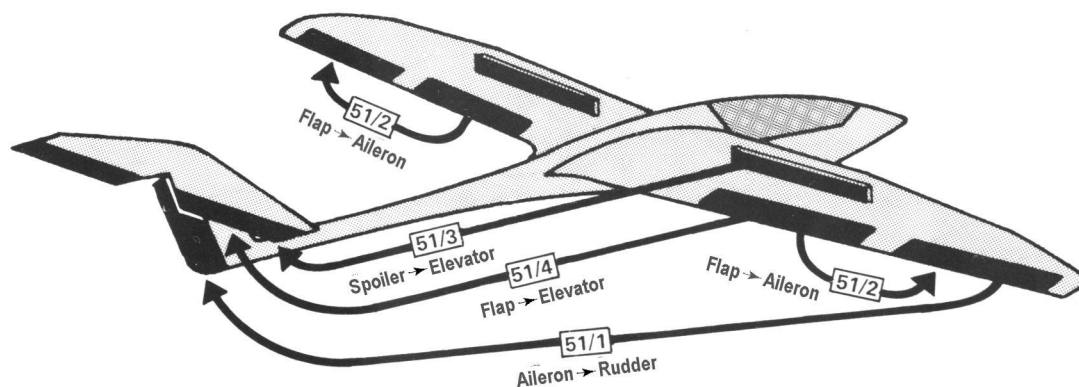


Allocation of Receiver Outlets

The servos must be connected to the receiver outlets as shown below.

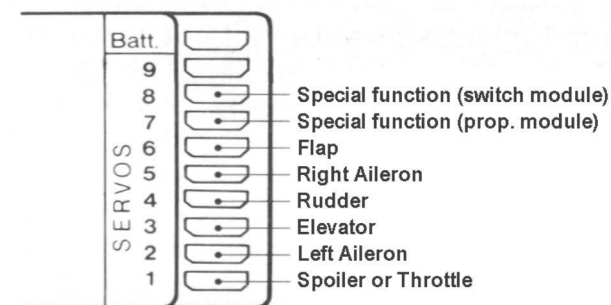

Block Diagram – Quadro-Flap

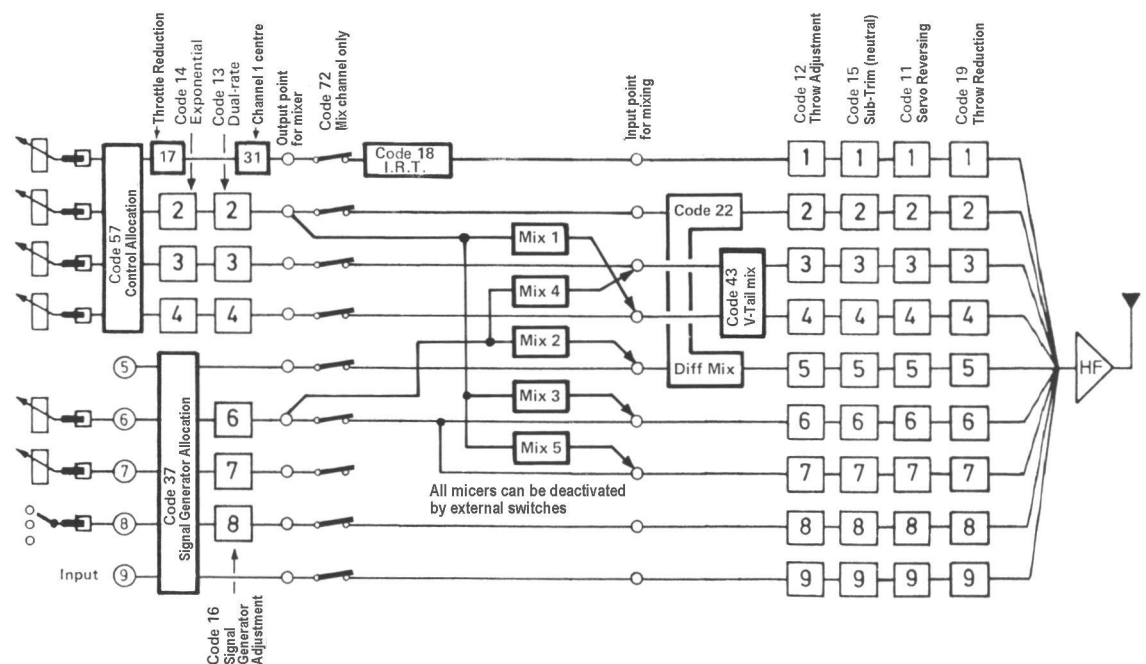

Allocation of Receiver Outlets

The servos must be connected to the receiver outlets as shown below. Unused functions should be left unconnected at the receiver.

